

# Cotton Candy Machine

Church events, fairs, sporting events, school carnivals, graduations, birthday parties, and family gatherings will benefit greatly from the use of this cotton candy machine. The cotton candy machine produces more than four servings per minute and over 60 cones per carton.



## Operation:

1. Plug in floss machine.
2. Without the motor running, fill floss head about 90% full with sugar.
3. Turn MAIN SWITCH and HEAT SWITCH to "ON" position to make cotton candy floss.
4. Turn heat control knob in the clockwise position to maximum setting. This produces fastest warm up.
5. The machine should make floss in a few seconds. When the unit gets up to heat, it will probably start to smoke. Just turn the heat control knob in the counter clockwise direction to eliminate the smoking.

**MAKING FLOSS:** Hold an inch or two of the pointed end of the cone between your two fingers and your thumb. With a light flicking action, break the web of floss that is building up in the pan and roll onto cone. Lift up the cone with the ring of floss attached and – by rotating the cone – roll the floss onto it. **DO NOT ROLL FLOSS ONTO THE CONE WHILE IT IS INSIDE THE PAN.** This will just pack the floss onto the cone.

## Rental Policies:

- Customer is allowed 3 days of use.
- Special rental rates apply for rentals over 3 days. Please call for prices.

Delivery & pickup is available, upon request. Please call for rates.